



Quick Guide

AutoWinch Seasonal

This Quick Guide is designed to provide a simple reminder on how to program and operate the AutoWinch Seasonal. Please refer to the *AutoWinch Seasonal Operator Manual* for full instructions.

Please ensure the unit is fully charged prior to operating.

INITIALISATION

1. Attach the AutoWinch Seasonal onto the Padman outlet winch.
2. Switch the unit by holding down the **ON** button on the keypad for between three and five seconds. Once the screen stops at **CLOSE THE GATE FULLY** screen, press the **▲** or **▼** buttons as required to fully close the gate. Press the **OK** button to continue.
3. If the gate is already in the closed position, press **OK**.
4. The **QUICK SELECTION** screen will now appear.
5. If the gate type you are operating is already saved as a favourite, use the **◀** or **▶** buttons until the relevant gate and command is located.



SINGLE OPEN AND CLOSE

This procedure will fully open the gate (100%) at the set time then fully close the gate (0%) after the nominated period of time has passed. The gate will then remain fully closed.

1. If the gate type and command type to be operated (eg: **B3 Open Close**) is already saved as a favourite, use the **◀** or **▶** buttons until the relevant gate and command, press **OK** then proceed to Step 3.
2. If the outlet and operation type hasn't been set as a favourite, press **OK** at the **QUICK SELECTION** screen then use the **▲** and **▼** buttons to cycle through the gate types until the correct gate type is located then press **OK**.
3. Once the **CONTROL** screen appears, press **OK** again so the **AUTOMATIC** option is indicated. Press **OK** again, after which the **OPEN - CLOSE** screen is displayed. Press **OK**.
4. Set the required Start Hour by using the **▲** or **▼** buttons.
5. Press the **▶** button then the **▲** or **▼** buttons to adjust the Start minutes, seconds, date, month and year. Press the **◀** at any time to go back to a previous field. Once all fields are entered, press **OK** to accept and continue to the **DURATION** screen.
6. Set the required number of days the outlet is to remain open by using the **▲** or **▼** buttons.
7. Press the **▶** button then the **▲** or **▼** buttons to adjust the number of hours and minutes. Press the **◀** at any time to go back to a previous field.
Once all fields are entered, press **OK** to accept then **OK** again once **OK to Accept** appears.
8. An **EVENT** screen will now appear, summarising the event just programmed.
9. Close the solar panel tray.

The AutoWinch is now ready for operation. Once the gate has closed, the unit will turn itself off.

OPEN GATE ONLY

This procedure will fully open the gate (100%) at the set time where it will stay open.

1. If the gate type and command type to be operated (eg: **B3 Open Only**) is already saved as a favourite, use the ◀ or ▶ buttons until the relevant gate and command is located then skip to Step 4.
2. If the outlet and operation type hasn't been set as a favourite, press [OK] at the **QUICK SELECTION** screen then use the ▲ and ▼ buttons to cycle through the gate types until the appropriate gate type is located then press [OK].
3. Once the **CONTROL** screen appears, press [OK] again so the **AUTOMATIC** option is indicated. Press [OK] again then ▼ twice, after which the **OPEN - ONLY** screen is displayed. Press [OK].
4. Set the required Start Hour by using the ▲ or ▼ buttons.
5. Press the ▶ button then the ▲ or ▼ buttons to adjust the Start minutes, seconds, date, month and year. Press the ◀ at any time to go back to a previous field.
Once all fields are entered, press [OK] to accept then [OK] again once the **OK to Accept** screen appears.
6. An **EVENT** screen will now appear, summarising the event just programmed.
7. Close the solar panel tray.

The AutoWinch is now ready for operation. Once the gate has opened, the unit will turn itself off.

STAGED OPENING

At the set time this procedure will open the gate through four stages until it is fully open (100%) then fully close the gate (0%) after the set period of time has passed. The gate will then remain fully closed.

1. If the gate type and command type to be operated (eg: **B3 Four Stage**) is already saved as a favourite, use the ◀ or ▶ buttons until the relevant gate and command, press [OK] then proceed to Step 4.
2. If the outlet and operation type hasn't been set as a favourite, press [OK] at the **QUICK SELECTION** screen then use the ▲ and ▼ buttons to cycle through the gate types until the appropriate gate type is located then press [OK].
3. Once the **CONTROL** screen appears, press [OK] again so the **AUTOMATIC** option is indicated. Press [OK] again then ▼ once, after which the **FOUR-STAGE** screen is displayed. Press [OK].
4. Set the required Start hour by pressing [OK] then the ▲ or ▼ buttons.
5. Press the ▶ button then the ▲ or ▼ buttons to adjust the Start minutes, seconds, date, month and year. Press the ◀ at any time to go back to a previous field.
Once all fields are entered, press [OK] to accept and continue to the **DURATION POSITION** screen.
6. Setting the first stage Duration and Position: Using the ▲ or ▼ buttons set the required number of days the outlet is to remain open.
7. Press the ▶ button then the ▲ or ▼ buttons to adjust the Duration hours, minutes then the first stage Position for the first stage (eg: 25%).
8. Press the ▶ button and repeat Steps 6 and 7 to set the Duration and Position for remaining stages.
9. Press ◀ at any time to return to a previous field. Once all fields are entered, press [OK] twice to accept.
10. An **EVENT** screen will now appear, summarising the first event just programmed. Pressing the ▶ button will cycle through the other three events.
11. Close the solar panel tray.

The AutoWinch is now ready for operation. Once the gate has closed after the fourth stage, the unit will turn itself off.